



Table of Contents

Privacy Clip	2
Software Location	2
Basic Settings	3
Advanced Settings	3
Brightness	4
Color Intensity	4
Contrast	5
Auto White Balance	5
Auto Focus	6
Additional Camera Controls	6

A new version of the Logitech Camera Settings is now on all University Life desktops! Below are instructions on how to use the camera, access the software and the different settings you can change.

Privacy Clip

Every C930e webcam comes with a privacy clip. This can be opened and closed and does not require removal. See below.




Software Location

On your desktop you will see Logitech Camera settings. Please contact VPULTS if you do not see this icon.



Basic Settings

In the camera settings app, you will be brought to “Home” which will allow you to change the image format and Antiflicker. See below the difference between the standard and widescreen image formats. We recommend you leave the Anti flicker set to NTSC 60hz.

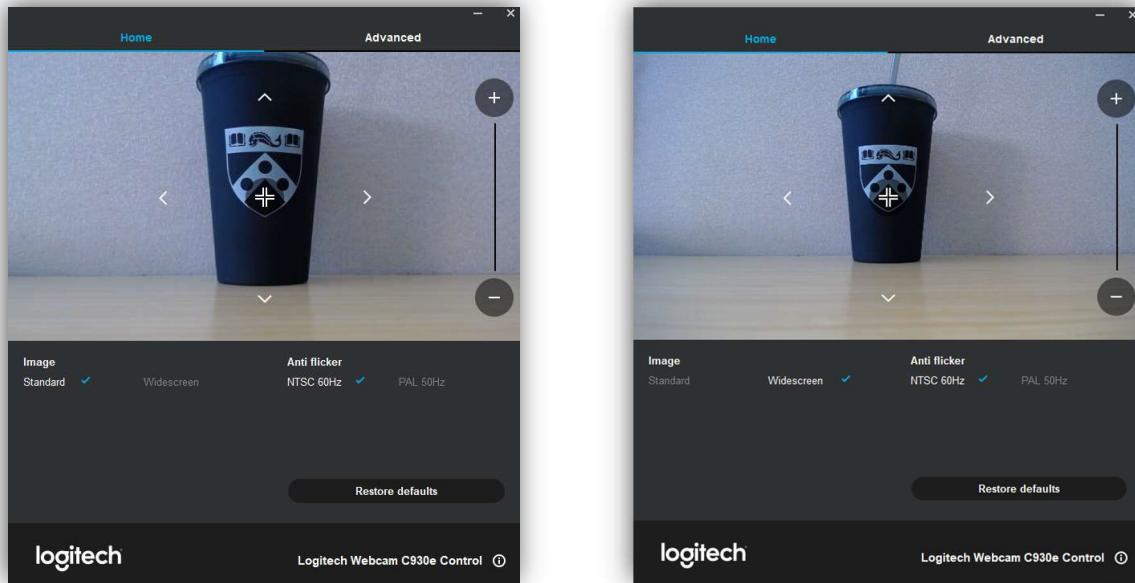


Advanced Settings

You have more options for configuring the webcam in the advanced section. Below are some examples of the effects in use. You can always click the “**Restore defaults**” button if you want to revert the changes you make.


Brightness

Can be adjusted as you see fit.

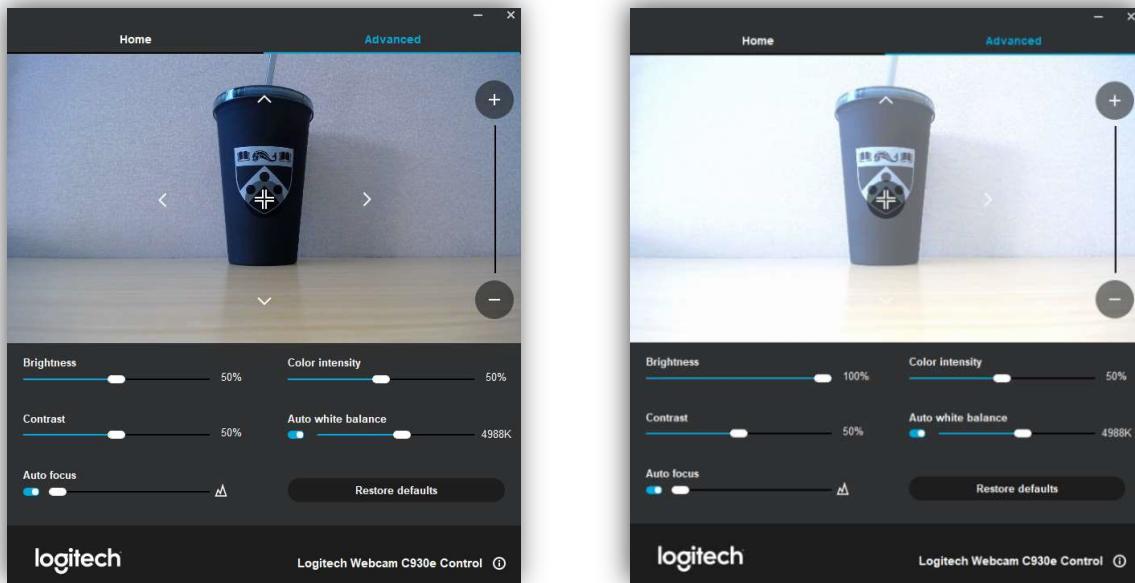


Color Intensity

Can be adjusted as you see fit.

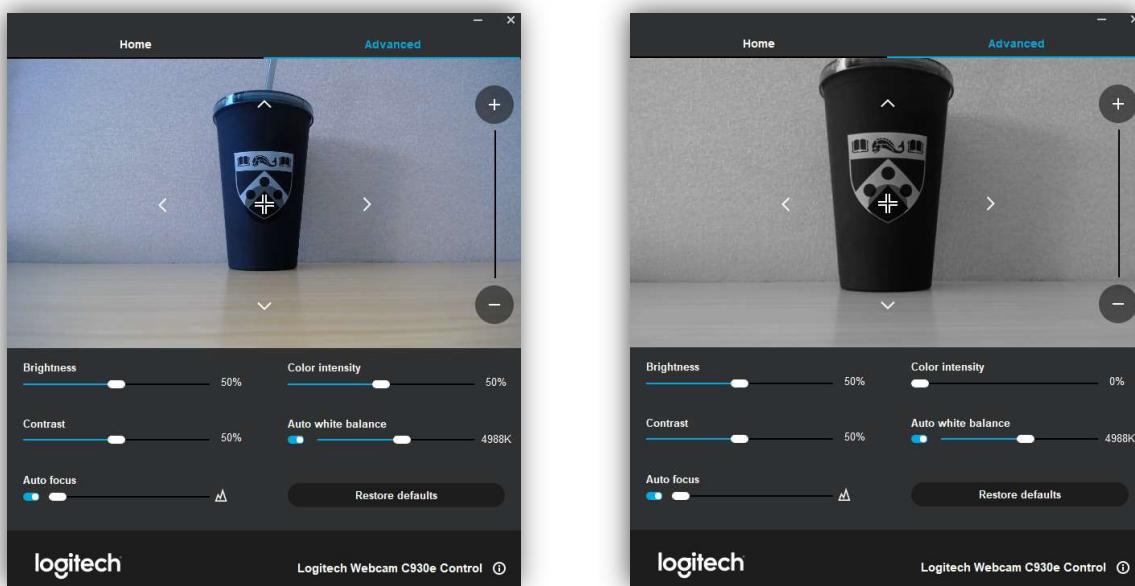


Contrast

Can be adjusted as you see fit.

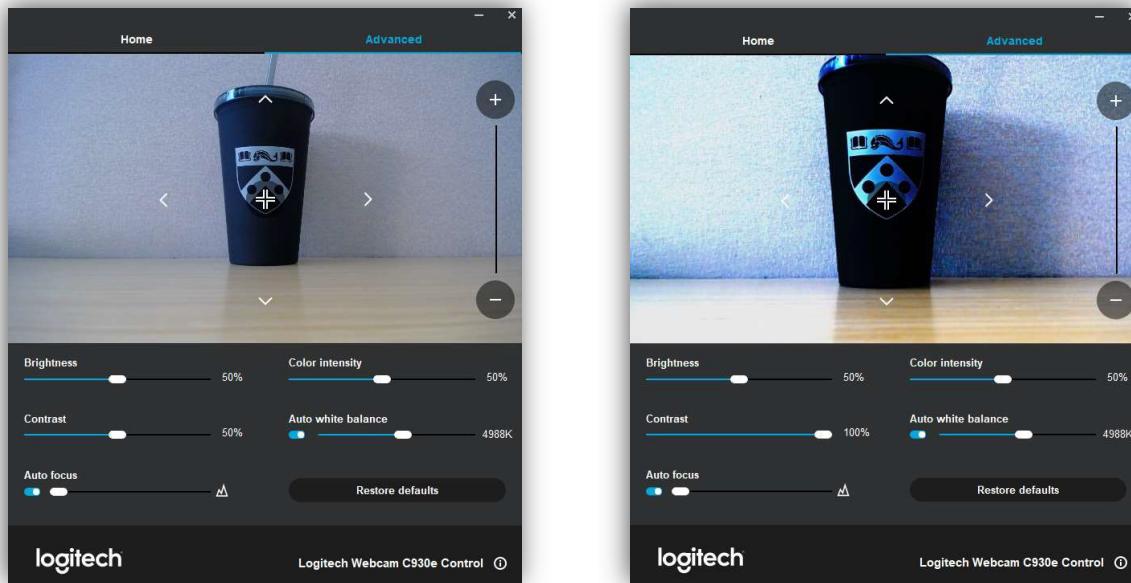


Auto White Balance

Recommended that you leave on.

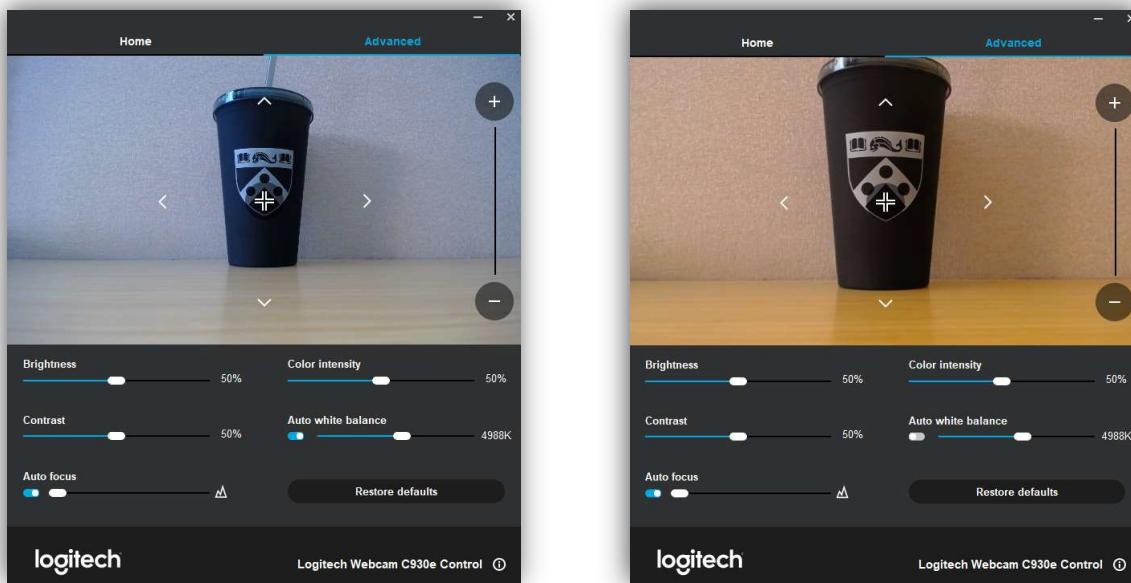

Auto Focus

Recommended that you leave on.

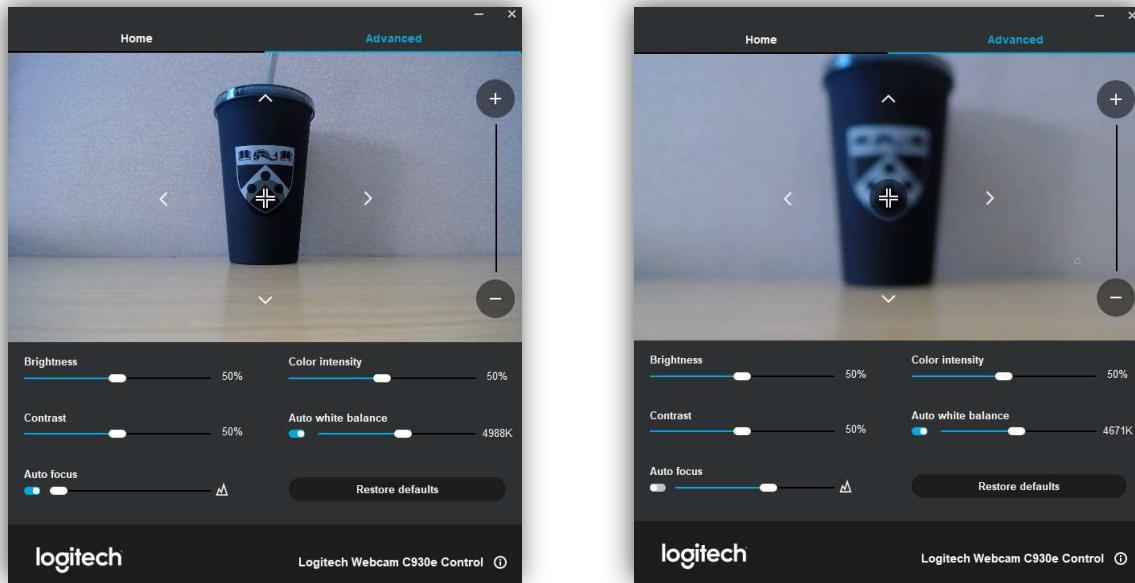

Additional Camera Controls

You can position the lens in the webcam and adjust the zoom using the arrow keys and the plus and minus keys. To reset the lens position, click the cross icon in the middle of the arrows.

